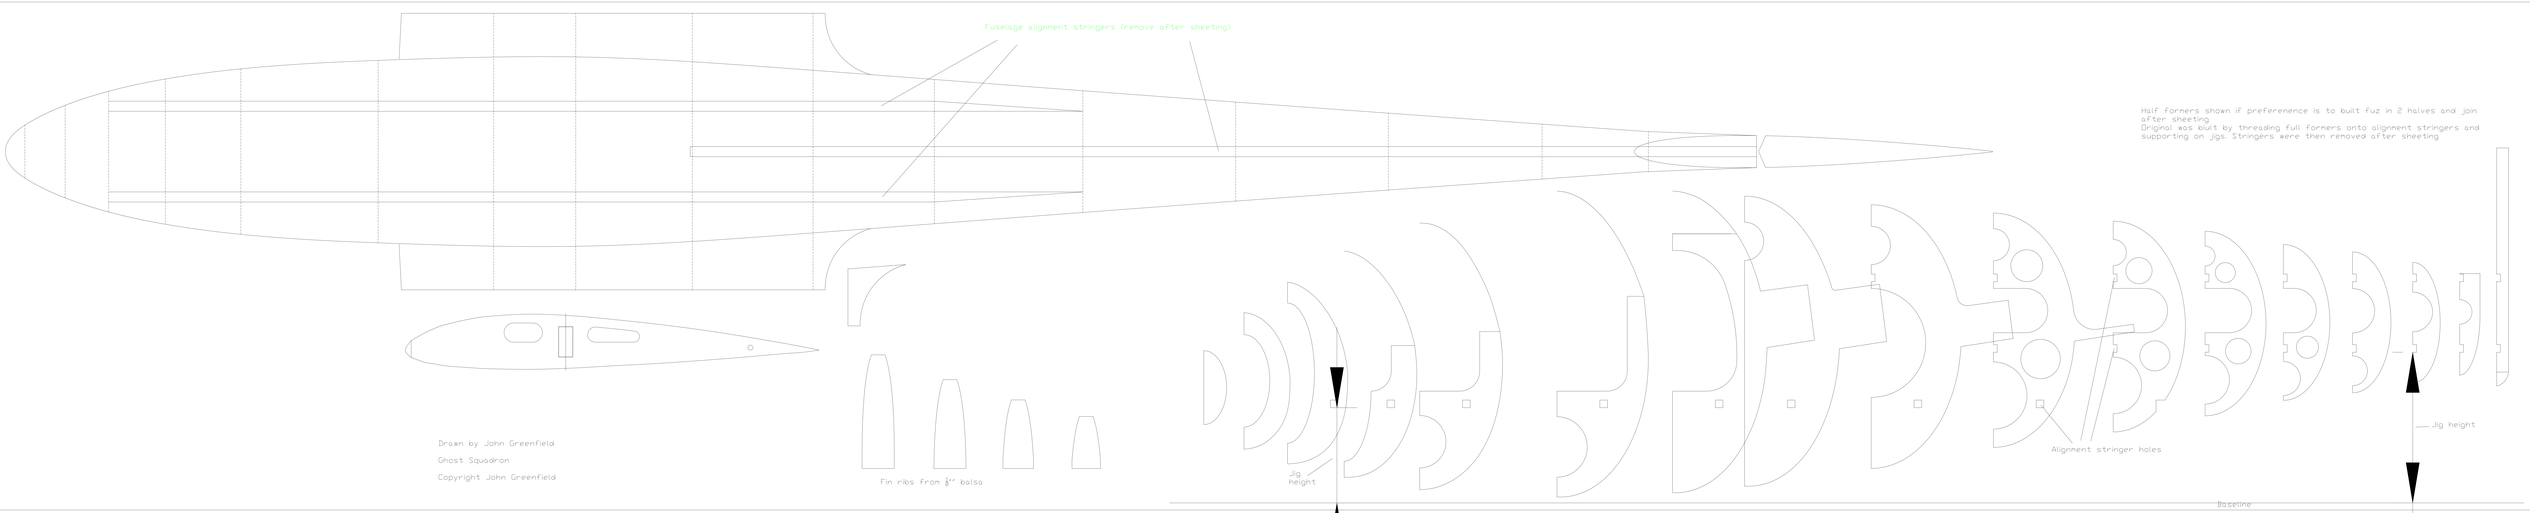
Fuselage alignment stringers (remove after sheeting)
Half formers shown if preferenence is to built fuz in 2 halves and join after sheeting
Original was built by threading full formers onto alignment stringers and supporting on jigs. Stringers were then removed after sheeting
Drawn by John Greenfield
Ghost Squadron
Copyright John Greenfield
Fin ribs from 1/8" balsa
Jig height
Alignment stringer holes
Jig height
Baseline